



NOTE:
SEE SHEET SW-18
FOR LOCATION OF PAD & TANK

SCHEMATIC - EMERGENCY DIESEL
GENERATOR PIPING
NO SCALE